


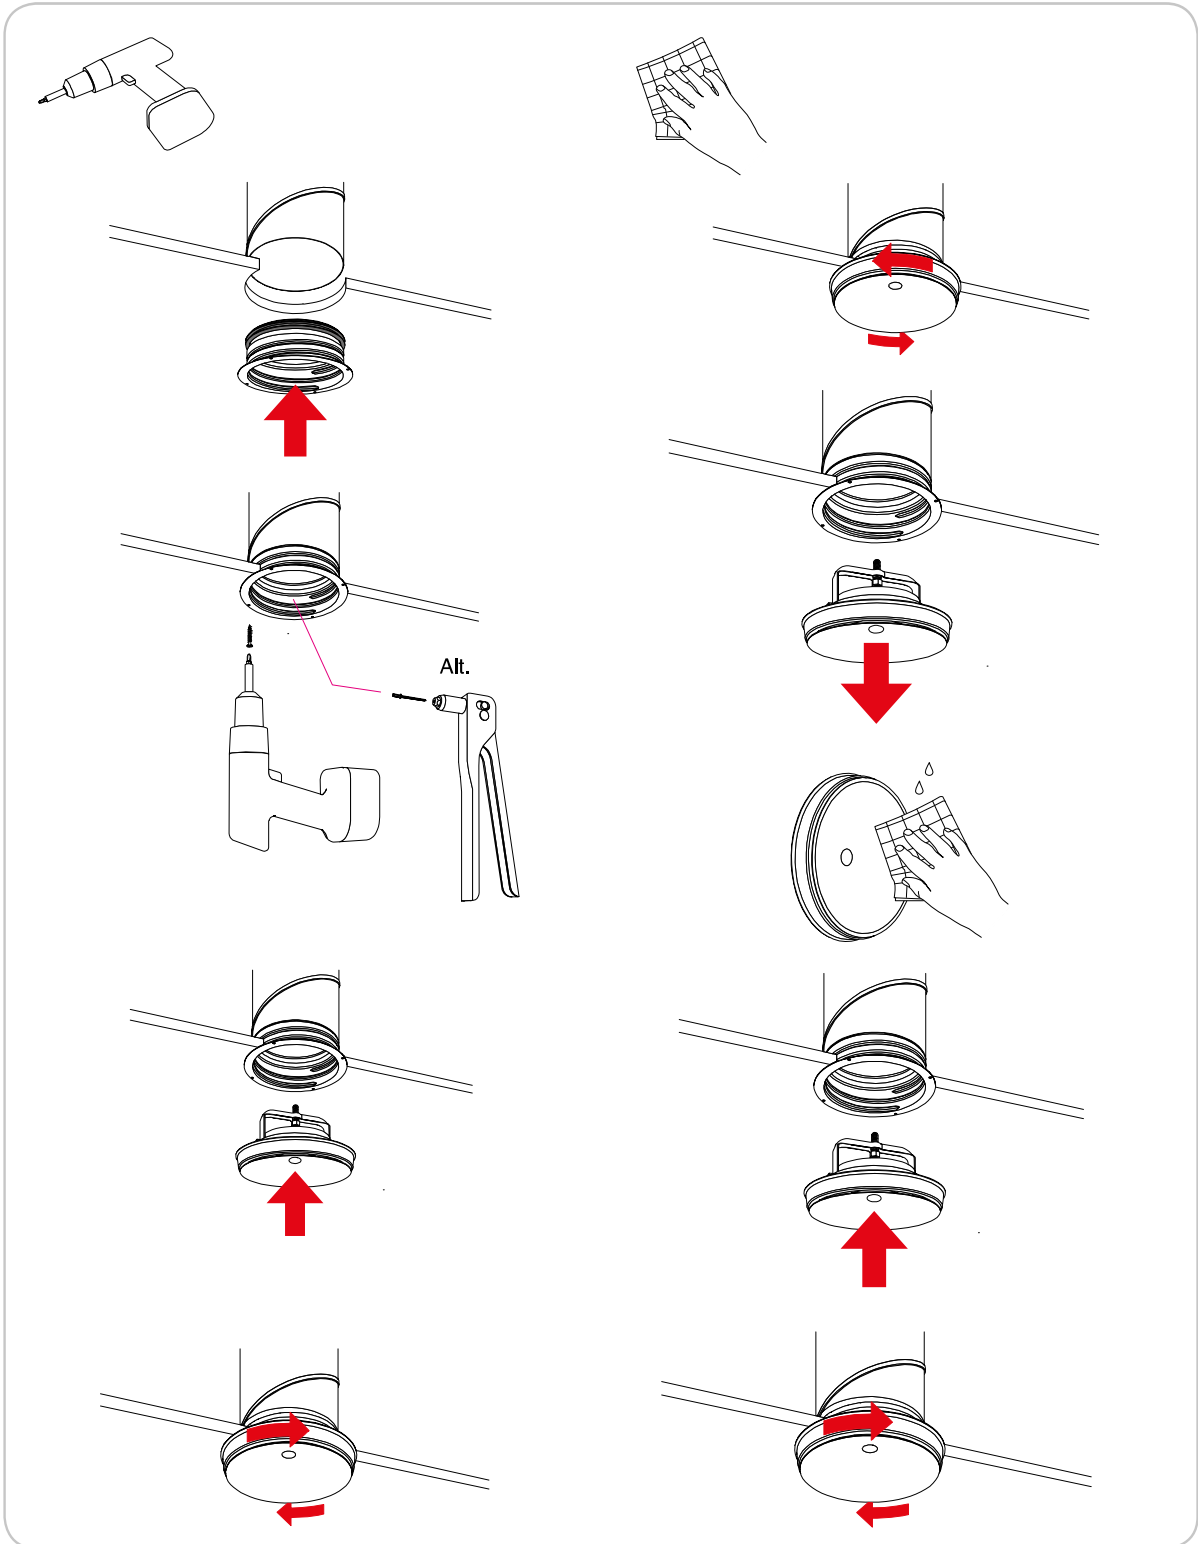

Venttiili

KIR





Venttiili

KIR

Alla olevat k-kertoimet koskevat vain tuotteita, jotka on valmistettu 1.10.2025 jälkeen.

Ilman suuntauslevyä

Ø mm		Asento a [mm]						
		a	2	4	6	9	12	15
100	D	a						
		k	0,85	1,72	2,35	3,40	4,20	4,70
125	D	a	4	6	9	12	15	
		k	2,30	3,25	4,55	5,80	6,80	
160	D	a	4	6	9	15	20	
		k	3,05	4,30	6,00	10,40	12,60	




Suuntauslevy asennettuna

Ø mm		Asento a [mm]						
		a	2	4	6	9	12	15
100	D	a						
		k	0,95	1,45	1,85	2,30	2,70	3,80
125	D	a	4	6	9	12	15	
		k	2,05	2,68	3,20	3,70	4,80	
160	D	a	4	6	9	15	20	
		k	2,70	3,90	4,75	6,40	7,70	



Venttiili

KIR

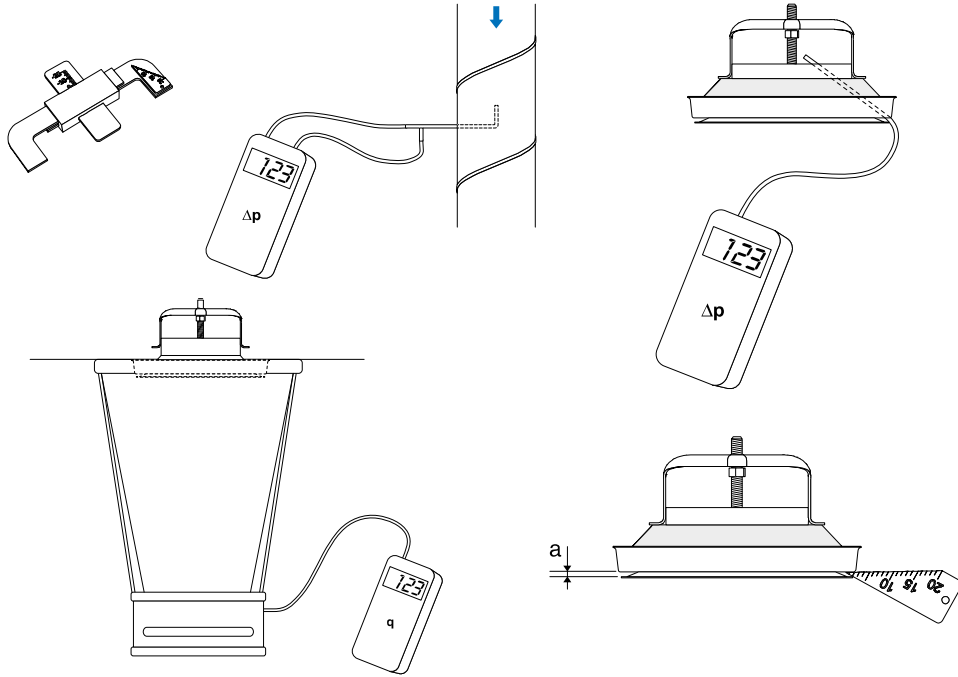

Ilman suuntauslevyä

Ø mm	Venttiili Asennuspaikka	Asento a [mm]					
		a	2	4	6	9	12
100	Kanava	k	1,09	1,56	2,11	2,81	4,31
		a	4	6	9	12	15
125	Kanava	k	1,95	2,99	4,41	5,72	7,41
		a	4	6	10	15	20
160	Kanava	k	2,10	3,74	5,83	9,66	12,8

Suuntauslevy asennettuna

Ø mm	Venttiili Asennuspaikka	Asento a [mm]					
		a	2	4	6	9	12
100	Kanava	k	0,882	1,45	1,75	2,49	2,89
		a	4	6	9	12	15
125	Kanava	k	1,97	2,65	3,40	4,23	4,77
		a	4	6	10	15	20
160	Kanava	k	1,69	2,73	4,39	5,91	7,35